

Nanni marine engine

Operator's manual

N4.65



English

You can download a copy of this manual in English on www.nannidiesel.com.

Français

Vous pouvez télécharger ce manuel en Français sur notre site Web à l'adresse www.nannidiesel.com.

1

CONTENTS

Introduction	1	Maintenance	32
About this manual	2	Service schedule.....	33
Safety.....	3	General inspection	35
Emergency kit	3	Air intake system.....	36
Safety alert symbols.....	3	Fuel system.....	37
Safety icons.....	4	Lubrication system	40
Safety precautions	5	Cooling system	42
Overview	9	Raw water system.....	46
About the engine.....	9	Electrical system	50
Warranty.....	13	Battery.....	51
Propeller selection	13	Long term storage.....	53
Behaviour of the boat.....	14	Troubleshooting.....	55
Engine main components	15	Technical data	57
Instruments panel	17	Emissions compliance.....	59
Standard panel.....	17		
Instrumentation	18		
Operation	23		
Before starting.....	23		
Starting the engine.....	24		
During operation	26		
Stopping the engine	29		

2

INTRODUCTION

Thank you for choosing a Nanni product!

Contact a Nanni authorized dealer for the servicing of your product. A list of dealers can be found on our web site:

www.nannidiesel.com

Nanni engines are the product of many years of experience in the development of marine engines and equipment designed for use in open seas. Your engine is built with the finest materials in accordance with precise specifications and strict production methods.

Before operating the engine, make sure that this manual is applicable to the engine. Refer to the Identification plate if you are not sure about the engine model designation. If you don't have the correct manual, please contact your Nanni authorized Dealer.

Correct installation of the engine on your boat is of the greatest importance for safe navigation and protection of the environment. The installation should be carried out by an authorized Nanni workshop in accordance with the installation instructions.

About this manual

This Operator's Manual contains important information, tips, suggestions and warnings. We urge you to read it carefully and familiarize yourself with the engine before starting.

For your own safety and longer service life of the engine, follow the instructions and warnings contained in this manual and in all documentation provided with the boat. Ignoring them could result in damage to the engine or personal injury to you or others.

Please ensure that this Manual is always kept in the boat. It should always be available to anyone else using the engine, i.e., anyone renting, borrowing or buying the engine from you.

■ Indicates the end of a section.

Content and updates

All the informations and specifications in this Manual are based on the technical data applicable and available at the time of publication. Changes and updates may be made by Nanni without notice.

Illustrations are not binding and intended as a general guide. They may vary from the equipment fitted in the engine in some details. Some sections of the Manual do not apply to all engines. If this is the case, a text indicates which engines it applies to.

If there are any equipment details that are not shown or described in this Operator's Manual, or if you have any questions about the operation of any equipment, your authorized Nanni Dealer will be glad to inform you of correct care and operating procedures.

■

Read this chapter carefully as it concerns your safety. Most accidents are caused by failing to follow basic safety rules. Be aware of the possible risks involved in handling the engine and make sure to take the necessary precautions to protect yourself, those around you and the equipment.

Read all informations supplied with the boat before starting the engine for the first time.

Always ensure that the maintenance of the boat and all equipment has been done in accordance with the instructions stated in the relevant Manual. Have all mandatory and necessary safety equipment handy in the boat and serviceable.

Emergency kit

You can order an emergency kit from any Nanni authorized dealer.

The engine emergency kit contains several components to carry out simple repair in the event of a fault.

Always have an complete emergency kit onboard and necessary tools to carry out any repairs.



Safety alert symbols

General rules of safety precautions to follow are indicated in this Manual. They are indicated as follows:

DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury, or could cause property damage.

NOTICE: Indicates important information in order to facilitate handling or avoid property damage.



Safety icons

Several stickers are fixed directly on the engine. They are intended to help you to quickly identify the location of certain components and avoid possible hazards when working on the engine.

Ensure these stickers are always visible and change them if necessary.



Refers to important informations and instructions to follow before handling the engine.



Indicates possible electrical hazards.



This icon indicates a risk of fire.



Indicates hot parts entailing substantial risks of burns.



Indicates an area containing pressurised fluids.



Stipulates that no flames or sparks should be created in the vicinity.



Indicates hazardous rotating parts.



Indicates the de-aeration orifice(s) (air bleed).



Indicates where to check the coolant level.



Indicates where to check the engine oil level.



Indicates the coolant drain orifice.



Indicates the oil drain orifice.



Your attention is required.



Safety precautions

Exhaust gas

Exhaust gases contain carbon monoxide. This colourless and odourless gas is extremely harmful and could lead to poisoning which could result in loss of consciousness or death. The first symptoms of carbon monoxide intoxication are as follows:

- Dizziness
- Nausea
- Headache
- Throbbing temples
- Vomiting
- Fatigue and falling asleep
- Tense muscles

If you or anyone else in the vicinity of the engine experiences any of these symptoms, leave the area of operation of the engine and find fresh air. If the symptoms persist, consult a doctor and have the engine checked.

Ensure the exhaust circuit correctly expels the gas produced by the engine. Regularly check that the exhaust circuit is free of leaks and that the exhaust elbow is in good condition.

Burns

Never touch the hot parts of the engine! An operational engine gets very hot: the exhaust system, turbo-compressor (if equipped), starter, oil sump, oil, coolant in the hoses and pipes are hot and can burn.

Fluids ejected under pressure can cause serious injury. Release all the pressure in the circuits before removing the caps. Never open the oil circuit and coolant caps when the engine is operational and/or hot. Never start or run the engine when the oil fill and coolant caps are not screwed on as hot oil or coolant could spray out.

If you come into contact with any of these fluids, consult a doctor immediately. If the engine gets too hot, switch it off and disconnect it and wait for it to cool down before checking for failure.

Fire

Do not smoke near the engine and keep away sources of ignition (flames or sparks) or any other potential flammable vapour or liquid sources. Do not run the engine without the air filter in place.

Do not run the engine in an area in which flammable or explosive materials are stored or where gas is present. Ensure there are no flammable liquids in the engine compartment.

Immediately clean up any liquids spilled and keep the engine compartment clean and accessible so as to minimise the risk of fire. Be careful as fuel can burn. Damaged pipes can lead to fire.

Explosion

Explosions caused by fuel vapour can cause serious injury! Carefully follow the safety rules when filling the fuel.

Open and ventilate the storage area of the engine after filling. Check that there are no fuel vapours or leaks before starting the fan (if fitted). Switch the fan on for 5 minutes before starting the engine.

All fuel vapours are flammable and explosive. Be careful when handling and storing fuel. Store the fuel in a ventilated area away from sources of ignition (sparks or flames) and out of the reach of children.

Stop the engine before filling with fuel or lubricant. Do not smoke near the engine and keep away sources of ignition (flames). When filling with fuel and/or lubricant, wear gloves and when investigating for possible leaks.

Do not alter or damage the fuel circuit. Close the fuel circuit whenever you work on it. Ensure you always have an appropriate working fire extinguisher to hand.

Hazardous Voltage/ Electrical Shock

Electrocution is possible whenever electricity is present. Hazardous voltage can cause severe injury or death. Operate the engine only when all guards and electrical enclosures are in place.

Open the main circuit breakers of all power sources before servicing the equipment. Configure the installation to electrically ground the engine, transfer switch, and related equipment and electrical circuits to comply with applicable codes and standards.

Never contact electrical leads or appliances when standing in water or on wet ground because these conditions increase the risk of electrocution. The voltage at these terminals can cause death.

Short circuits can cause bodily injury and/or equipment damage. Remove all jewellery before servicing the equipment.

Hazardous backfeed voltage can cause severe injury or death. Connect the engine to the building/marina electrical system only through an approved device. Work on the electrical circuit should only be carried out by qualified technicians.

Operations on the shore power equipment must only be carried out by electricians authorized to work with high voltage installations.

Special attention must be brought on boat with metallic hull, especially concerning the protection of the persons against electrical shock and the protection against galvanic and electrolytic corrosion.

Battery acid

The acid in batteries can cause serious injury and even death!

When servicing the batteries, wear protective gloves and goggles. Batteries contain sulphuric acid which is highly corrosive.

Acid can spurt from batteries when they are handled. If the acid comes into contact with the skin, rinse thoroughly in fresh water and consult a doctor.

Risk of battery explosion

A battery explosion can cause serious injury and even death! Ensure the battery storage compartment is corrected ventilated.

Do not smoke near the batteries and keep them away from sources of ignition (flames or sparks). They produce hydrogen which could ignite or explode on contact with an electrical arc or a flame.

Switch off all electrical appliances in the vicinity when you are working on the batteries.

Ventilate correctly storage batteries compartment. Avoid touching the battery terminals with metal tools so that no sparks are created which could cause an explosion. Remove the rings, bracelets and necklaces before handing the batteries.

Rotating parts

Rotating parts can be extremely dangerous and cause serious injury and even death!

Do not work on the engine when it is operational. If work on the engine when running is absolutely necessary, do not touch any hot or rotating parts.

Baggy clothing, hair or objects could be pulled in and/or caught and cause serious injury or substantial property damage.

Do not wear bracelets, necklaces or rings when working on a engine. Check that the bolts and screws are properly tightened and that the protection mechanisms are in place. Do not check the tension of the alternator belt when the engine is operational.

Accidental starting

Accidental starting can cause serious injury and even death!

Disconnect the battery before working on the engine. Ensure no one is alongside the engine or working on it before starting it. A rotating propeller can cause serious injury or death. Ensure all the protective guards are in place before starting the engine.

Chemical products

The different fluids used to run the engine are a health hazard. Carefully read the instructions on the packaging of these products and always check that the ventilation in the storing space is adequate.

Follow environmental regulations concerning the disposal of oil, fuel, coolant, filters and batteries. Do not touch pipes with bare hands when looking for possible leaks.

Water ingress

The engine should be protected against water ingress by all means. Water ingress leads to complete engine failure. This is not covered under any warranty terms.

Water can enter the engine after filling the exhaust system.

Correct installation of the engine on your boat is of the greatest importance for safe navigation and protection of the environment. The first protection against water ingress is a correct installation of the engine.

A correct use of the engine is also important to protect the engine against water ingress. The operator/owner is responsible for the correct operation of the engine and for the implementation of all necessary means to protect the engine against water intrusion.

After a vessel capsizing, or if the engine has been filled with water, do not start the engine, except in extreme emergencies, and contact an authorized Nanni dealer.



4 OVERVIEW

About the engine

Engine identification

Both the engine and the transmission has an identification plate that contain several informations.

Keep these plates accessible and in good condition. Record and keep the engine and transmission serial number and designation. These numbers should always be quoted when ordering service and replacement parts.

The engine identification plate is as follow:



- **TYP** indicates the commercial designation of the engine.
- **NR** indicates the engine serial number.
- **CODE** lists various specifications of the engine.

Break in

Operate the engine with care for the first 50 hours of operation.

Do not race the engine while it is cold. Do not operate it at full load except for short periods. Never run the engine at constant engine speed for long periods during the break in period.

Check the oil and coolant level frequently during the running-in period. The oil consumption can be more important during the running-in period.

Engine installation


The installation must be carried out by an authorized Nanni workshop in accordance with the installation instructions. Correct installation of the engine is of the greatest importance for safe navigation and protection of the environment.

It also ensure maximum service life under normal conditions of use.

Engine damage caused by failure to follow installation instructions is not covered by the warranty.

Remote Control

The remote control is an optional extra not in the scope of supply of the engine. The remote control installed on the boat can be different than the ones shown in this document.

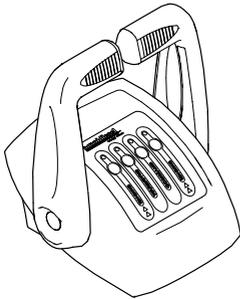


On most boats, the control lever controls both the engine rpm and the gear shift (ahead / astern). However, some boats can be equipped with a separated shift command.

It can also be fitted with a neutral safety switch that prevents the engine from starting until the lever is in neutral position.

Consult the boat builder or your Nanni dealer if you are not sure about the operation of the remote control.

Power Take Off

Some engines can be fit with a Power Take Off system. This system allows to power accessories like bilge pump, watermaker, etc.

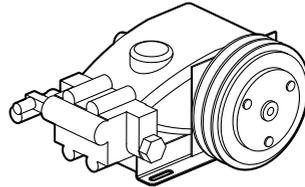

NOTICE: Any mechanical power taken from the engine from a PTO reduces the power delivered to the propeller. The use of a PTO should always be studied and approved by the R&D department of Nanni Industries S.A.S France. Contact your Nanni dealer for more informations.

Trolling valve

The Trolling valve system allows to reduce the rotation speed of the propeller below its speed when the engine is at idle. The boat speed is reduced by 30% to 70%.

⚠ CAUTION

The Trolling valve system must never be used for manoeuvring. It also must never be used at an engine speed of more than 1200 rpm.

Operation in cold weather conditions

Nanni engines are designed to operate effectively in cold weather.

However, for effective starting and cold weather operation, extra care are necessary. Contact your Nanni dealer for additional information and local availability of cold weather aids.

Winter grade fuel allows to protect the injection system when temperatures fall below 5°C (40°F). Winter grade fuel is best suited for cold weather operation thanks to its lower cloud and lower pour points.


However, using winter grade fuel may reduce power and fuel efficiency as winter grade fuel has a lower BTU (heat content) rating. Check the grade of fuel being used before troubleshooting for low power complaints in cold weather operation.

In all cases, fuel quality and fuel sulfur content must comply with all existing emissions regulation for the area in which the engine operates.

Oil viscosity

Use seasonal grade viscosity engine oil based on the expected air temperature range between oil changes.

Follow the diagram below to adapt the oil viscosity:

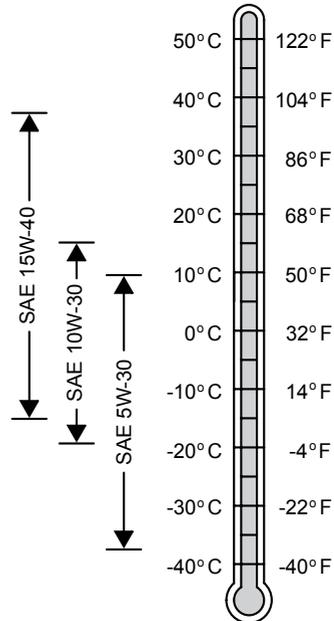

As an option, some engines are available with an air intake heater to aid cold weather starting. Contact your Nanni dealer for more information.

Engine homologation

The engine type can be exhaust emission certified. It means that Nanni guarantees that all engines of the same type that are manufactured are approved and certified by the authorities in accordance with different exhaust emissions standards.

However, for the engine to be in accordance with this standards, special requirements for maintenance and service are to be followed:

- Only Nanni replacement parts must be used.
- Maintenance intervals must be observed.
- The engine must not be modified in any way except with accessories and service kits approved by Nanni Industries S.A.S. France.
- Service of the fuel system must always be carried out by an authorized Nanni workshop.
- No modifications to the air intake and exhaust system may be undertaken.
- Seals may only be broken by authorized personnel.
- The operation instructions stated in the relevant manuals should be followed by the user.

Nanni's responsibility for the engine specification being in accordance with the certification will be invalidated if one or several of these conditions are not followed.

Environmental responsibility

Nanni designs its engines to have minimum environmental impact. This objective, however, can only be achieved with your full cooperation.

Our operating and maintenance instructions are to help you to protect your engine and adopt environmentally responsible behaviour.

Ensure you only use the fuels and oils recommended. Using another type of fuel or oil could cause major malfunctions, an increase in fuel consumption, a reduced engine service life, and a greater discharge of exhaust gases.

When draining the oil and changing the oil or fuel filter, dispose of the waste in an appropriate container.

These fluids cause major damage to flora and fauna if discharged into nature. Use an absorption kit in the event of accidental discharge of oil or fuel into the water.



Warranty

This manual is supplemented by a Warranty Information Booklet. We recommend that you read this publication thoroughly.

Pay special attention to the applicable duty cycle and to the limitations that result. Failure to comply with the warranty conditions will void the Warranty.

The validity of the Warranty is also dependent on proper installation and maintenance operation being carried out by an authorized Nanni representative.

NOTICE: Late or improper maintenance or use of spare parts other than Nanni original spare parts will invalidate Nanni's responsibility for the engine accordance with homologation and will void the Warranty.


Modifications to the engine's settings, as well as any other technical modification (accessories, spare parts, additional equipment, etc) **ARE FORBIDDEN WITHOUT WRITTEN AUTHORIZATION FROM NANNI INDUSTRIES S.A.S.**

Any modification will void the Warranty. Damage caused by failure to follow operation instructions or incorrect operation is also not covered by the warranty.



Propeller selection

The propeller is a critical component of the propulsion system. It converts the engine power in thrust. To be efficient, the propeller must be perfectly adapted to the boat and to its use.

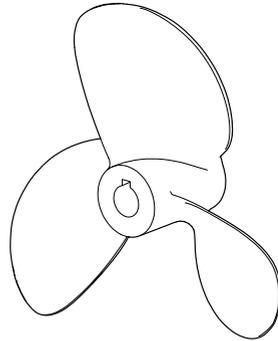

The performance of your engine will be critically affected by the choice of propeller, as an incorrect choice could also damage the engine. Engine speed depends on the propeller size and boat load. If engine speed is too high or too low for good engine performance, this will have an adverse effect on the engine.

The propeller should always allow the engine to reach its rated speed with the maximum boat load. A faulty operation of the engine is often due to an inadequate and / or damaged propeller.



Behaviour of the boat

If this is your first boat or if you are not familiar with the boat, we urge you to practice controlling the boat at slow speed as a first step.

Avoid violent manoeuvres or unexpected speed changes while sailing. People can fall over or overboard.


Keep also in mind that the weight distribution (passengers, equipments, etc.) inside the boat has an impact on the behaviour of the boat when cruising. Depending the position of the load, the behaviour of the boat may change, particularly in the case of a planning hull.

The condition of the hull and the propeller is also a critical factor. A dirty and / or damaged hull will modify the behaviour of the boat and therefore the engine performance. It can also cause cavitation which can seriously erode the surface of the propeller, the drive, etc.




Engine main components

NOTICE: minor engine details may not be exactly as shown. Some components may not be part of the engine ordered. Not binding pictures.

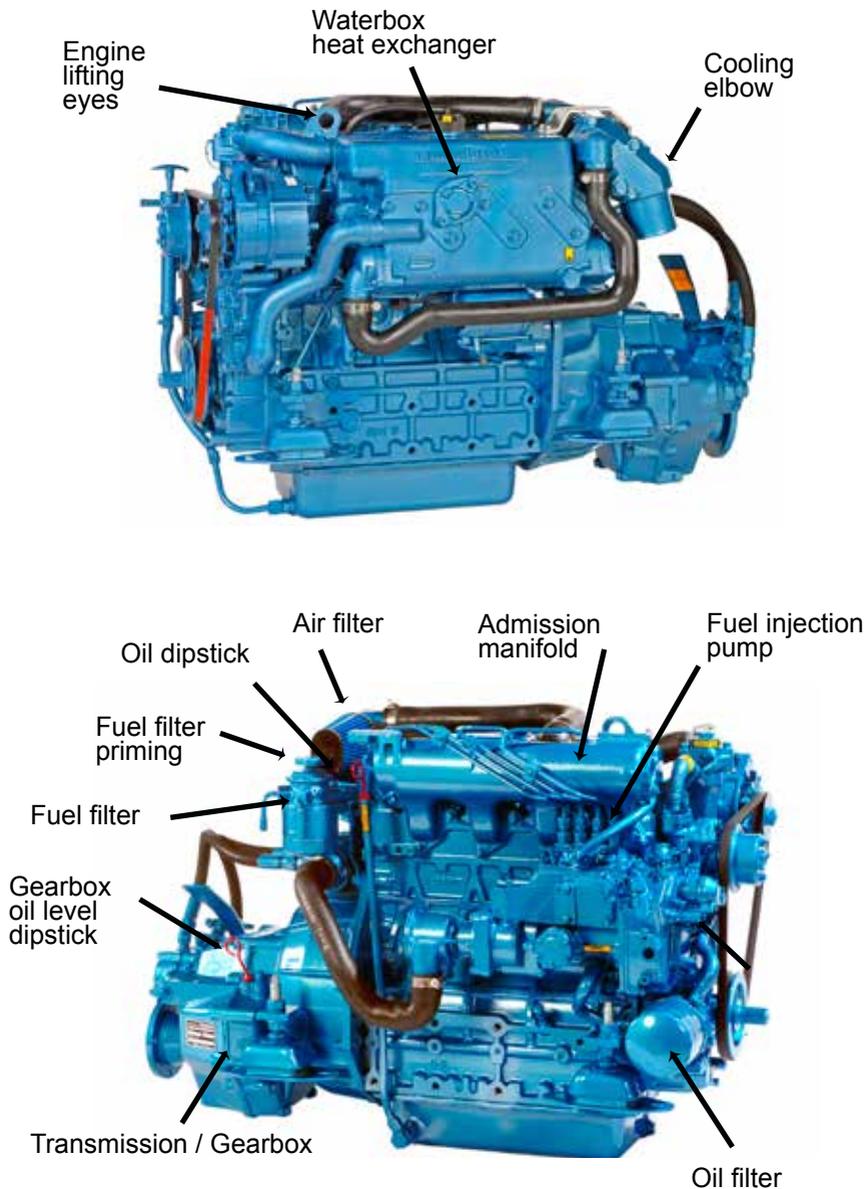

N4.65

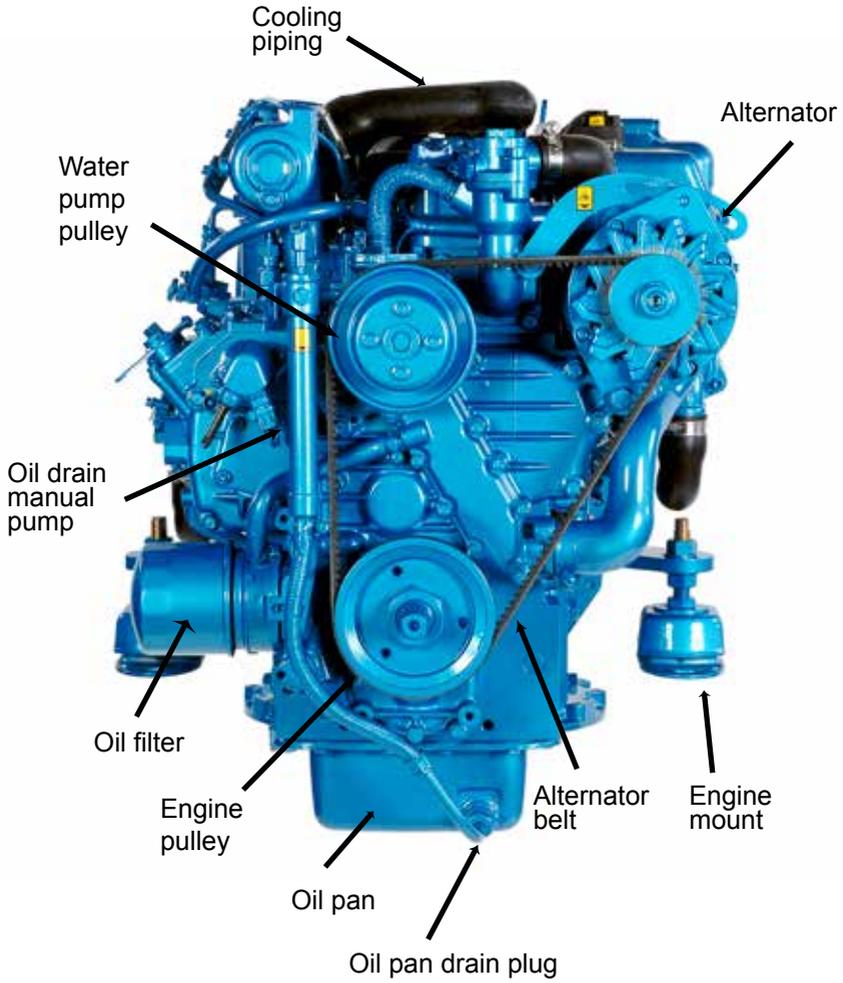

5 INSTRUMENTS PANEL

! WARNING

Read the starting and stopping instructions before operating the engine.

The instrument panel provides you with important informations about the engine.

NOTICE: This chapter only describes instruments and panels that come standard on Nanni engines. Contact your dealer if the boat is fitted with instruments not described in this chapter or if you are not sure about their function. Depending the boat, the instruments can be installed directly on a dashboard without the panel shown here.


On some boats, a panel without key is used as an additional instrument panel in Flying Bridge position. A main panel fitted with a key switch generally located in the wheelhouse is used to prevent unauthorized starting from the additional panel. To start the engine using the additional panel, the key of the main panel should be switched to **IGNITION** position.

Standard panel

A4 PANEL



C4 PANEL

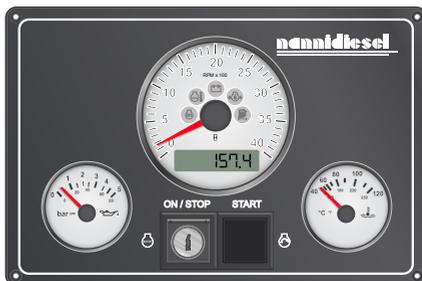

Instrumentation

Tachometer & Warning lamps

The analog tachometer displays the engine speed. Multiply the indicated value by 100 to get the revolutions per minute of the engine.

The function of the warning lamps is explained in the following pages.



Hourmeter & Voltmeter

The display at the bottom of the dial shows the operating time of the engine in hours

When the system voltage is connected, the display indicates the voltage at the battery terminals.

Starter switch

The starter switch allows to start and stop the engine.

The **ON/STOP** switch allows to connect the system voltage and to stop the engine.

The **START** button allows to preheat the engine and engage the starter.



Engine oil pressure indicator

NOTICE: This indicator does not show the engine oil level. This indicator shows the oil pressure in bar and psi.

If the oil pressure in the lubrication circuit is too low, the acoustic alarm sounds and the corresponding warning lamp comes on.



Coolant temperature indicator

Indicates the coolant temperature in Celsius and in Fahrenheit degrees.

If the coolant temperature is too high, the acoustic alarm sounds and the corresponding warning lamp comes on.



Warning lamps

COOLANT TEMPERATURE



This warning lamp comes on and the alarm sounds when the coolant temperature is too high.

⚠ DANGER

 
Never open the coolant filler cap or any plug of the cooling system when the engine is warm. Steam or hot fluid can spray out.

⚠ CAUTION

* If this alarm comes on while the engine is running, stop the engine, except in extreme emergencies, and check the coolant level, the belt condition, the raw water filter condition, and that the sea cock is open.

* Operating the engine while the coolant temperature is too high can lead to severe engine damage. Do not operate the engine if the problem persists and contact a Nanni workshop as soon as possible.

BATTERY CHARGE



This warning lamp comes on when the system voltage is connected.

If this lamp lights up when the engine is running, it indicates that the alternator of the engine is not charging.

The cause can be a fault in the electrical system or because the alternator belt is slack.

⚠ CAUTION

* If this alarm comes on while operating the engine, stop the engine, except in extreme emergencies, and check components of the belt system. Also check components of the electrical system (fuses, battery, etc).

* Do not operate the engine if the problem persists and contact a Nanni workshop as soon as possible.



PREHEATING



This lamp comes on when the glow plugs (if fitted) are activated.

ENGINE OIL PRESSURE



This warning lamp lights up and the alarm sounds when the engine oil pressure is too low.

⚠ CAUTION

- * If this alarm comes on while operating the engine, stop the engine, except in extreme emergencies, and check the engine oil level and the oil filter condition.
- * Operate the engine when the oil pressure is too low can lead to severe engine damage. Do not operate the engine if the problem persists and contact a Nanni workshop as soon as possible.

WATER IN FUEL FILTER



This lamp lights up and the alarm sounds when there is too much water in the fuel filter of the engine (not applicable on some engines).

If this alarm comes on, stop the engine and drain the water in the fuel filter.



Note

6 OPERATION

Before starting

⚠ **WARNING**


Put back all the protective guards and covers before starting the engine.

⚠ **CAUTION**

* Open the sea cock (if equipped) before starting the engine. The raw water pump impeller will be damaged if it runs dry even for few seconds, and may lead to engine overheating.

Perform all of the following operations before starting the engine:

1. Open sea cock (if fitted). Prime the raw water system if necessary.

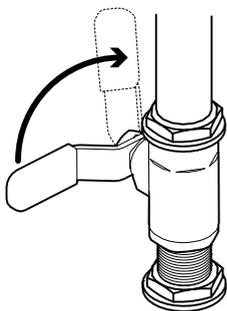

2. Start the compartment fan (if fitted) for at least five minutes. Otherwise, open the hold.

3. Check that there is sufficient fuel in the tank.

4. Move the control lever to the neutral position.

5. Open fuel cock, prime the system if necessary.

6. Check the engine and transmission oil level and fill with the recommended oil if necessary.

7. Check the coolant level, top up if necessary.

8. Check the control cables, grease the connections if necessary.

9. Check there are no fuel, oil, coolant or water leaks.

10. Check the alternator belt.

11. Switch ON the main switch.

12. Lower the drive (Stern Drive version only).



Starting the engine

DANGER

* The propeller can cause serious injury when in motion. Check that no swimmer or diver is in the water near the propeller before starting.

* Never use a start spray or any other equivalent product. These products are highly flammable.

CAUTION

* Always preheat the engine. Never race the engine while it is cold.

* Do not crank the engine continuously for more than 10 seconds at a time. Let it cool down for 2 minutes between cranking attempts. Failure to follow these guidelines may result in starter motor burnout.

* If the engine does not start after 3 attempts, remove the key and drain the water in the waterlock. Failure to do so may lead to water ingress in the cylinders.

NOTICE: When starting the engine for the first time, let it run at idle for several minutes and check for leaks or malfunction.

Starting using booster batteries

CAUTION

Make sure that the batteries in use are matching the engine's system voltage.

1. Connect the jumper cable to the positive pole (+) of the depleted battery, then to the positive pole (+) of the booster battery.
2. Connect the jumper cable to the negative pole (-) of the booster battery. Then connect the other end of the cable to a bolt on the clutch of the engine block.

DANGER

On an engine with a two pole electrical system, connect the other end of the jumper cable to the negative pole (-) of the booster battery.

3. Start the engine following the starting procedure.
4. Let the engine run at idle for few minutes to charge the battery.
5. Stop the engine and remove the cables in the exact reverse order from installation.

Panel with key

1. Move the control lever to the neutral position.
2. Insert the key in the **ON/STOP** starter switch.
3. Turn the key a quarter-turn to the right. All the warning lamps come on and the acoustic alarm sounds. After a few seconds, only the **ENGINE OIL PRESSURE** and **BATTERY CHARGE LAMPS** remain lit.
4. Press fully the **START** button to start the engine. Once the engine has started, release the button, all lamps go out.
5. If the engine is fit with water cooled exhaust elbow, check that water flows from the exhaust outlet at the hull. If the water does not flow, stop the engine and check the raw water system.

Panel without key

1. Switch the key of the main panel to ignition (if equipped).
2. Move the control lever to the neutral position.
3. Press the **ON/STOP** button. All the warning lamps come on and the acoustic alarm sounds. After a few seconds, only the **ENGINE OIL PRESSURE** and **BATTERY CHARGE LAMPS** remain lit.
4. Press fully the **START** button to start the engine. Once the engine has started, release the button, all lamps go out.
5. If the engine is fit with water cooled exhaust elbow, check that water flows from the exhaust outlet at the hull. If the water does not flow, stop the engine and check the raw water system.

During operation

⚠ ATTENTION

Never press the **START** button when the engine is running.

Check the instruments and warning lamps after starting, and regularly when cruising.

When a fault occurs, the acoustic alarm sounds and the LCD display indicates the source of the alarm.

Stop the engine if there is an abnormal reading of an indicator or if an alarm comes on, except in extreme emergencies. Investigate to find the cause and repair if it is possible.

Do not operate the engine if the problem persists and contact a Nanni workshop as soon as possible.

Cruising speed

A recommended engine speed is given in the chapter **TECHNICAL DATA** to help you to set your cruising speed. Always consider sailing conditions and load of the boat to set the cruising speed.

Operating the engine at wide open throttle should be avoided since it is both uncomfortable and uneconomical.



Note that operating the engine at a too low rpm for a long period could lead among other things to increased oil consumption.

Deposits may also form in the injection system if the engine do not reach its nominal operating temperature regularly.

Run the engine at full throttle regularly in order to burn off any possible deposits in the fuel system.

Manoeuvring

WARNING

Shifting between ahead and astern should be done at idling speed. Shifting at higher speed can damage the engine and the transmission and be dangerous for passengers.

CAUTION

On a twin engine boat, both engines should be started during reversing manoeuvres to reduce the risk of water ingress in the stationary engine.

Carry out the following operations for forward / reverse manoeuvres:

1. Reduce engine speed to idling and, if possible, let the boat lose most of its speed.
2. Move the control lever to the neutral position and wait a few seconds.
3. Move the control lever into astern. Increase the speed.

Cruising in shallow water

Use extreme caution when cruising in shallow water or in areas likely to contain submerged objects that can hit the propeller, the drive, the hull, etc.

After hitting a submerged object, immediately switch off the engine and check the condition of the transmission, the propeller shaft, the drive and the tie bar (Stern Drive version only) and the hull.

CAUTION

A damaged tie bar may affect steering characteristics, and in the worst case steering could be lost altogether.

If excessive vibration are generated by the propulsion system, return to the harbor at low speed and have your propulsion system checked by a qualified technician.

AUTOMATIC KICK-UP FUNCTION

ONLY IN STERN DRIVE VERSION

The automatic kick-up function release the drives if it grounds or hits an object in the water.

The function only protects the drive **when running ahead (forwards)**.

Operating the trim system

ONLY IN STERN DRIVE VERSION

The trim system allows to adapt the angle of the drive in relation to the transom.

It also allows to lift the drive for operation in shallow water or when depth is uncertain. The position of the drive is shown on the trim indicator.

⚠ CAUTION


- * Modifying the boat trim will affect its performance and its behavior when cruising.
- * Avoid cruising at high speed when the drive is raised to the max in the trim range.
- * On twin engine installation, the drives must be raised in the lift range at the same time in the beach or in the lift range.
- * The drive is protected against corrosion by anodes and a special paintwork. Make sure not to damage the anode and check their condition regularly.

The trim system is operated using the trim control located at the control position. It is generally integrated to the control station.

NOTICE: The model of control station and trim control can vary according the boat. Informations are given as an example. Control station and trim control can be different.

When cruising, press the button **A** upward to raise the bow. Press the button downwards to lower the bow.

Press the button **B** to lift the drive in the beach or in the lift range.

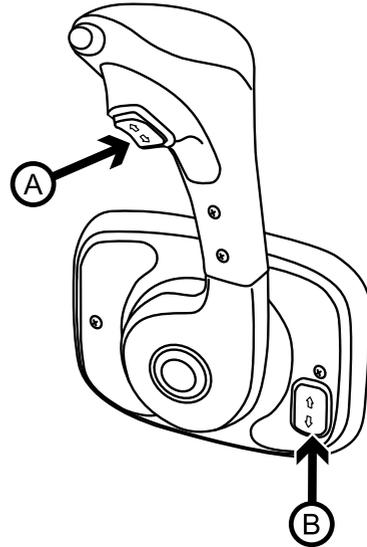

⚠ CAUTION

The max engine speed allowed when the drive is in the beach range zone is 1000 rpm.

Stopping the engine

CAUTION

Never stop the engine by using the main switch. This could damage the electrical system.

Before stopping the engine, let it run at idle in neutral for few minutes, especially if the engine has been operated at high speed and load. This will allow the coolant to cool down the engine.

1. Start the fan in the engine compartment (if fitted) or open the hold.
2. Turn the key on the panel counter-clockwise. The engine stops, all lamps go out. For panel without key, press the **ON/STOP** button and release it.
3. Turn the key of the main panel counter-clockwise. All indicators turn off.

CAUTION

Even after the engine has stopped, some components and fluids remain hot and pressurised for several minutes. As far as possible, limit work on the engine immediately after stopping it, when it is hot.

After the engine has stopped:

1. Switch off the main switch.
2. Close the sea cock and the fuel cock.
3. Inspect the engine compartment and check for any leaks.

CAUTION

- * If the boat is being towed, stop the engine and close the sea cock to prevent the engine from being filled with raw water. With a Stern Drive propulsion system, put the drive in the **LIFT RANGE**.
- * On twin engine installation, if cruising with a single engine, close the sea cock of the stopped engine. Do not forget to open it again before restarting the engine.

Anchoring

When the boat is at anchor or in port for extended period, vegetation may develop on the hull, the keel, the drive, the rudder, the propeller, etc. It will significantly affect the behaviour of the boat and the performance of the engine if the vegetation is not removed before the next time the boat is used.

Vegetation and fouling can also obstruct the raw water system and result in damage to the engine by overheating.

Inspect and clean the boat and the raw water system each time the engine is used. Clean if necessary. If the boat is put out of water, clean the hull and spray a coat of anti-fouling. Never paint the anodes.

Furthermore, when the boat is at anchor or in port for extended period, water can fill the exhaust system via the exhaust outlet. It is necessary to drain regularly the waterlock when the boat is at anchor.

Storage


If the boat is being left in the water while not in use for few weeks, the engine must be controlled and run few minutes every 10 days.

If the boat will not be used for more than 2 months, special set of operations must be performed on the engine and the transmission. Refer to the chapter **LONG-TERM STORAGE**.

To prevent damages due to freezing, the cooling systems (raw water and coolant) must be drained when there's a risk a frost. Refer to the corresponding chapters in the section **MAINTENANCE** and to the chapter **LONG-TERM STORAGE**.

All these operations should be carried out by a Nanni authorized workshop.

ONLY IN STERN DRIVE VERSION

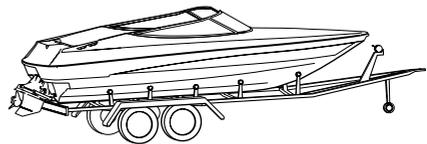

Before removing the boat out of water, raise the drive in the lift range and lock the transmission using the optional kit or any equivalent system. Put the drive in the lift range and lock the transmission using the optional kit or any equivalent system.



Note

⚠ WARNING

* As far as possible, perform maintenance operations with the engine stopped, remove the key from the panel and turn off the power supply.

* Read this whole chapter and all safety precautions before starting any maintenance work. Make sure you understand how to perform every operation.

This manual only describe preventive maintenance operations to be carried out by the owner/operator of the engine. Carrying a set of preventive maintenance operations in accordance with the service intervals will ensure engine optimal reliability and service life.

During the warranty period, it is essential that all work is carried out by a Nanni authorized workshop. Furthermore, all servicing should be registered in the Nanni after-sale system.

However, some regular checks, particularly those made each time the engine is used, can only be carried out by the user. Few other operations are explained further on so that you can work on the engine in an emergency or if there is no repair centre nearby.

We recommend to have all your works checked by a Nanni authorized workshop.

Independent repair and adjustment work on the engine beyond a limited scope is forbidden for safety reasons.

Improper work endangers the person working on the engine and the others. Particularly operations on valve timing and injection system.

NOTICE: The service intervals and relevant informations concerning the preventive maintenance of the transmission are indicated in the user manual provided by the manufacturer of the transmission. Contact your Nanni dealer for further information regarding the maintenance of the transmission.

The hourmeter displays the operating hours of the engine.

Service schedule

NOTICE: An operation requiring service every day requires service after 100 hours or every year, and so on. Some components may not be part of the engine ordered.

Operations marked with ► should be done in a Nanni workshop.

* Operations to perform after 20 operating hours or 45 days after commissioning.

BEFORE OPERATING THE ENGINE

- Check the engine & transmission oil level. Top up if necessary *.
- Check the coolant condition and coolant level. Top up if necessary *.
- Check the raw water filter and clean as necessary *.
- Drain water from the fuel prefilter *.
- Check the condition of the battery *.
- Check the warning lamps of the instrument panel *.
- Control and adjust general water tightness *.
- Check the stuffing box condition *.

EVERY 100 OPERATING HOURS / AT LEAST EVERY YEAR

- Clean the air filter. Change if needed.
- Change the fuel filter *.
- Check the condition and the tension of the belts. Change if needed*.
- Check the anodes. Change if needed*.
- Check and tighten the electrical connections & cables, the clamps and screws *.
- Remove the sediment from the fuel tank and drain the fuel tank.
- Check the control unit, the condition of the cables, grease the cables *.

EVERY 200 OPERATING HOURS / AT LEAST EVERY YEAR.

- Change the engine and transmission oil *.
- Change the oil filters *.
- Change the fuel filters *.
- Check the raw water pump impeller. Change if needed.
- Check the engine flexible mountings. Adjust as necessary *.
- ▶ Clean the Turbo Wastegate.
- ▶ Clean and touch up the paintwork as necessary.

EVERY 400 OPERATING HOURS / AT LEAST EVERY 2 YEARS.

- ▶ Change the thermostat of the heat exchanger.
- ▶ Change the heat exchanger filler plug.
- ▶ Drain and change the coolant. Clean the coolant system.
- ▶ Check and clean the heat exchanger tube stack. Change the O-ring.
- ▶ Check and clean the air cooler tube stack. Change the O-ring. Check and clean the transmission oil cooler tube stack.
- ▶ Check the fuel injection nozzles. Change if needed.
- ▶ Check cold valve clearance.
- ▶ Check and clean the Turbo. Change the thermal protection of the turbo.

EVERY 1000 OPERATING HOURS / AT LEAST EVERY 4 YEARS.

- ▶ Change the flexible engine mounts
- ▶ Change the timing belt.

General inspection

⚠ CAUTION

Do not let oil, fuel or grease deposits build up around the engine as they may increase the risk of fire in the engine compartment.

Make a habit of visually checking the engine and its compartment each time you operate the boat, before starting the engine: check for fuel, water or oil leaks, check the tightness of the different clamps and bolts, the condition of the belt, hoses and electrical wirings, the wear of anodes (if fitted), the battery electrolyte level and all components of the engine mounting system.

Control cables


The engine rpm and the gearbox shift command are controlled by mechanical control cables connected to the control lever.

Adjust the tension of the cable if necessary. If any defect appears (rust, crack, etc), the control cable must be changed.

Stuffing box

⚠ DANGER

A stuffing box lubricated with raw water taken from the engine cooling system must never be installed on a Sail boat or when the exhaust elbow is below the waterline. A separated water supply or a stuffing box lubricated by grease must be used on all Sail boat or when the exhaust elbow is below the waterline.

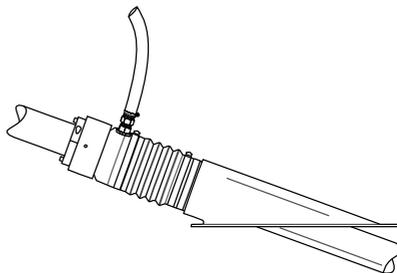

If the boat is equipped with a braided-type stuffing box, check the system's tightness. As this system is not absolutely tight, it is normal that a slight amount of water passes through the stuffing box. Correct operation is characterized by a drop-by-drop water intake. If too much water comes in, stop the engine and contact your Nanni dealer as soon as possible.

In any case, always make sure that the lubrication of the stuffing box is sufficient.

Exhaust system

Inspect all exhaust system components (hoses, clamps, mixing elbow, manifold, etc.) Check for cracks, leaks and corrosion. Tight or change them if necessary.

Check for carbon or soot residue on exhaust components as it indicates an exhaust leak.

If any defect appears on component of the exhaust system, change it as there's a risk of exhaust leakage or water penetration in the engine and the boat.

Air intake

WARNING


Carry out these operations when the engine is stopped and cold. Make sure that no dust or dirt enter the intake manifold.

The air filter reduces the level of noise made by the air intake and prevent particles from penetrating the intake manifold.

The reliability and the performances of the engine depend among other things on the quantity and the temperature of the intake air.

To check the air filters:

1. Remove the clamps and remove the filters.
2. Clean the inside of the filters with dry compressed air.
3. If the air filters are quenched or punched, change them.
4. Install the new filters with the clamps. Make sure the clamps are tight enough, while not damaging the filter mount.

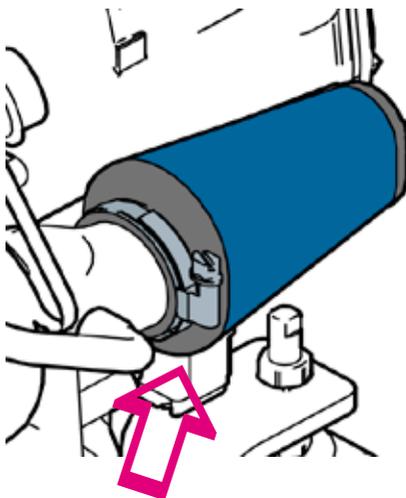

Clamp to release

(Generic picture)

Fuel system

DANGER

- * Stop the engine and let it cool down before refuelling or carrying out any operation on the fuel system.

WARNING

- * Fuel is flammable and can be dangerous. Fuel spilled on hot surface or near spark can burn.
- * Do not step on the injection pipes. Always make sure they are not damaged.

CAUTION

Total cleanliness must be guaranteed when working on the fuel system. No impurities should enter the injection system. Make sure not to spill fuel on hoses.

NOTICE: All work on the fuel injection system must be carried out by a authorized Nanni technician.

Check regularly the condition of the components of the fuel system (hoses, filter, clamps, etc). Change it if any defect appears.

Operation of the fuel system

The fuel is drawn from the tank by the fuel feed pump and is injected into the combustion chamber by the injection pump. A fuel filter is placed between the feed pump and the injection pump.

The injection pump delivers a larger amount of fuel than required for combustion. The fuel that is not burned is re-injected into the tank through an over-flow pipe.

CAUTION

The injection pump is an extremely precise unit. Water entry in the fuel system will cause major failure to the injection pump and to the whole fuel system.

A fuel prefilter with a water separator should be installed between the fuel tank and the fuel filter on the engine. The prefilter should be installed as close as possible to the engine fuel filter. It must never be installed on the engine as vibrations affect the water/fuel separation process.

If the fuel tank is located below the engine injection pump, an additional electric fuel feed pump should be installed between the prefilter and the feed pump of the engine.

Fuel requirements

Only use grade of fuels indicated in the chapter **TECHNICAL DATA**. Other grades of fuel can increase fuel consumption and cause operating problems, resulting in a shorter engine service life.

Use of fuel additives can result in poor performance or engine damage.

Before starting the engine, make sure that the fuel level is above the lower limit. If the fuel level is too low, add fuel to the upper limit. Do not overfill.


Use a strainer when filling the fuel tank. Dirt and dust in the fuel will cause trouble in the fuel injection system.

If the boat is not used for an extended period, fill the tank to the maximum level.

Fuel prefilter

The fuel prefilter is an optional extra not in the scope of supply of the engine. The model of prefilter can vary according to the boat.


NOTICE: Drain the water in the prefilter several hours after the engine has been stopped.

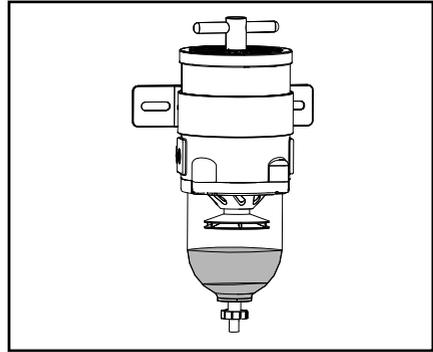

1. Close the fuel cock on the fuel tank.
2. Place a container under the fuel prefilter. Drain water and remove impurities using the cock/plug.
3. Tighten the cock/plug once the water has been drained.
4. Check the filtering element, change it if necessary.
5. Open the fuel cock.
6. If the filtering element has been changed, bleed the fuel system. Start the engine and check for leaks.

Replacing the fuel filter

NOTICE: Do not fill the new filter with fuel before assembly.

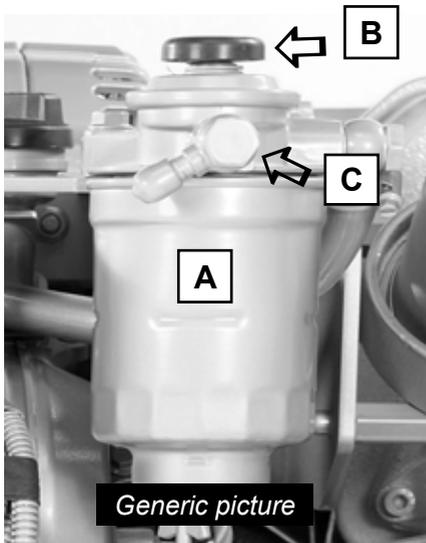

1. Close the fuel cock. Wipe up the holding filter bracket with a clean non flint cloth.

2. Remove the protective tank.

3. Put a plastic bag over the filter **A** to prevent spills on the engine.

4. Remove the fuel filter **A**. Use a filter wrench tool if filter is ceased.

Check and clean the sealing surface of the filter bracket. Apply a thin film of fuel onto the seal.

5. Screw the new filter by hand until the seal touch the matting surface. Screw a further half turn.

6. Open the fuel cock and bleed the air in the fuel system.

Air bleeding

Bleeding the air in the fuel system might be required:

- After a maintenance operation on the fuel system.
- If the fuel tank has been emptied.
- The engine has not been started for a long time.

To bleed the fuel system **IF IT IS NOT FITTED** with an electric pump:

1. Fill up totally the fuel tank. Open the fuel cock.

2. To avoid spills, Dispatch a non flint cloth around the venting screw **C** and loose it afterwards.

3. Pump the fuel using the lever **B** until fuel free of air bubbles flows out of the venting screw.

NOTICE: If the lever is too hard to operate, turn the crankshaft a fraction of a turn.

4. Carry on pumping and in the mean time, tighten the venting screw.

5. Pump again a few more times to make sure to prime completely the system.

To bleed the fuel system **IF IT IS FITTED WITH AN ADDITIONAL ELECTRIC FUEL FEED PUMP** :

1. Fill totally the fuel tank. Open the fuel cock.
2. Loose the venting screw **C**. Use rags around the venting screw.
3. Start the engine for 5 to 10 seconds to let the electric fuel feed pump bring fuel to the injection pump.
4. Pump the fuel using the lever **B** until fuel free of air bubbles flows from the venting screw.
5. Continue pumping and at the same time tighten the venting screw.
6. Pump few other times to prime the system.

⚠ CAUTION

Avoid draining all fuel in the filter



Lubrication system

⚠ CAUTION

Never over-fill the engine oil crankcase.

NOTICE: With a new or reconditioned engine, oil and oil filters must be changed after 20 hours of operation. Use oil grades quality indicated in the chapter **TECHNICAL DATA**. Warranty claims may be rejected if unsuitable oil grade has been used.

The viscosity may be adapted depending the climatic conditions.

Oil level - Adding engine oil

Check the engine and transmission oil level before starting the engine. Always make sure that the level is in the safe range.

The oil level should be within the range indicated on the dipstick, between the Mini and Max level. To check the oil level:

1. Remove and wipe the dipstick.
2. Re-insert and remove the dipstick.
3. Check that the oil level is between the Mini and Max mark.


If the level is too low, remove the oil filler plug and add oil slowly.

Wait a few minutes before checking the oil level to let the oil drain down to the oil pan.

NOTICE: Completely drain the previous oil before adding new engine oil. Never mix different type of oil.

Draining the engine oil


1. Start the engine and let it warm few minutes so that oil suction is easier.
2. Stop the engine and remove the key from the panel.
3. Connect a disposal hose to the drain pump and place a container under the disposal hose.

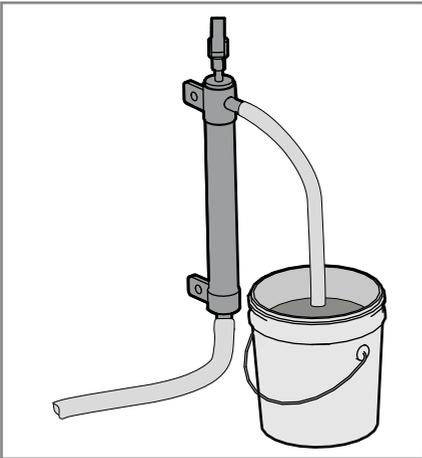

4. Let the pump suck all used oil from the pan.
5. Disconnect the oil drain pump and replace the cap on the drain pipe.

Changing the oil filter

Replace the oil filter every time the engine oil is drained.

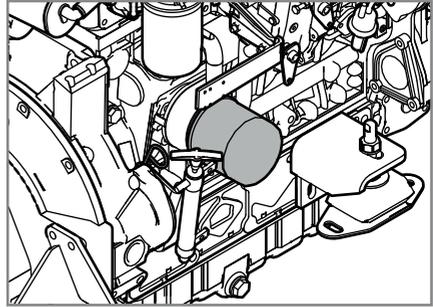

1. Remove the oil filter with a filter wrench tool. Turn the filter counter-clockwise (CCW). Remove the gasket.
2. Clean the mating surface in order to prevent impurities from entering the engine.
3. Apply a film of oil on the new gasket. Screw the new filter by hand with the new gasket. When the gasket contacts the mating surface, turn the filter a half turn.
4. Fill with proper amount of new oil. Check for leaks and check the oil level.
5. Start the engine and let it operate few minutes at idle. Check if the oil pressure warning lamp turns off.
6. Stop the engine, wait for the engine to cool down and check the oil level. Top up if necessary.



Cooling system

Overview

The cooling system cools the engine in order to maintain a proper operating temperature and prevent overheating. On some engines, the cooling system also cools the fuel, the oil or the intake air. The cooling system is made of two circuits:

- The **COOLANT CIRCUIT** which is the engine's internal cooling system. It's a closed-circuit in which coolant flows and cools the engine.
- The **RAW WATER CIRCUIT** which cools the coolant via heat exchange with raw water. Nanni engines come as standard with an heat exchanger, in which the coolant is cooled by heat exchange with raw water taken from a sea cock. A Keel Cooling system can also be used to cool the coolant instead.


A thermostat maintains the coolant at a proper and constant operating temperature. With thermostat control, the coolant only enters the heat exchanger when the engine reaches a certain temperature.

⚠ CAUTION

Operating the engine without coolant or raw water supply, even for few seconds, will lead to complete engine failure.

Operation principle of the cooling system

Operation principle of an engine with heat exchanger:

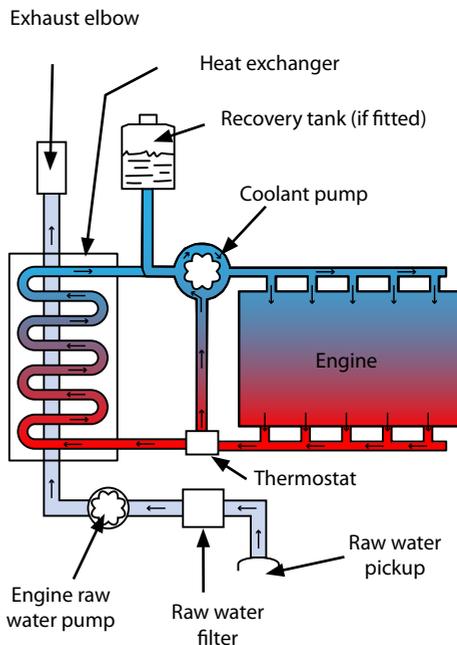

Coolant

CAUTION

- * Always use coolant made of 50% antifreeze with anticorrosion additive and 50% of clean water. The antifreeze protects the engine against internal corrosion.
- * This mix must be used all year around, even if there is no risk of frost.
- * Never use water alone to completely fill the coolant system.

CLEAN WATER

Use clean soft water, distilled water or tap water to mix with antifreeze. Natural water generally contains minerals and sometimes salt, which can oxidize metal and accelerate corrosion process.

ANTI-FREEZE

Never use poor quality antifreeze. The main components of the anti-freeze can corrode metal, gathering rust in the cooling system over an extended period. Poor quality anti-freeze has poor content of corrosion preventive. The content further becomes less potent with the dilution of water.

Choose additive that will not have any adverse effects on the materials of the cooling system. Never mix different additive as it may cause chemical reactions and therefore malfunctions.

WATER BOILER

A water boiler can be connected to the engine coolant circuit.

If the boiler is located above the engine, an additional recovery tank must be installed above the boiler.

The amount of coolant must be adapted depending the model of water boiler to completely fill the coolant system.

COOLANT EXPANSION

When it heats, the coolant expands and takes up a higher volume.

The heat exchanger is fitted with a system that allows to compensate this expansion.

Make sure not to overfill the heat exchanger when filling with coolant.


Coolant level

DANGER

Never open the coolant filler cap or any plug of the cooling system when the engine is operating or warm. Steam or hot fluid can spray out.

Always check the coolant level before starting the engine.

1. Stop the engine and remove the key from the panel.
2. Turn the coolant filler cap **A** slowly to the first stop and let any pressure escape from the system. Remove the cap.

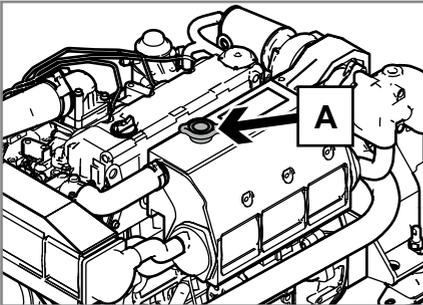


3. Coolant level should lie between the filler neck lower edge and the level spur.
4. Top-up using clean water only.
5. Reinstall the coolant filler cap.
6. Check the coolant level in the recovery tank (if fitted). It should lie between the Min and Max mark of the recovery tank. Add clean water if necessary.

NOTICE: The Min and Max level indicated on the recovery tank (if fitted) does not indicate the correct level of coolant.

Draining the coolant circuit

1. Stop the engine and remove the key from the panel.
2. Put a container along with a hose under the drain plug **B** located at the bottom of the water cooling box to collect coolant. Remove the filler cap to ease draining flow.

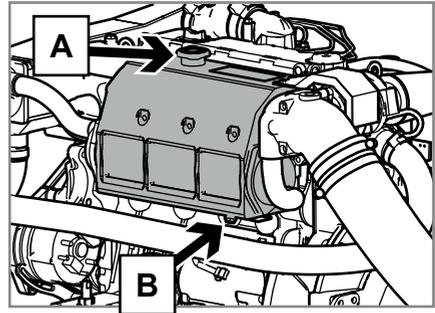


3. Drain off all coolant. Empty the recovery container as well as the hoses used in the process.
4. Insert a hose into the heat exchanger filler port. Rinse with fresh water until water which flows from the drain port is clean.
5. Reinstall the drain plug and fill with coolant to the correct level.

Coolant - Filling

Mix the anti-freeze with water in a clean container before filling the heat exchanger. The coolant must be totally free from dust. Fill the exchanger slowly not to introduce air into the coolant system.

Refer to the chapter **TECHNICAL DATA** to know the coolant capacity of the heat exchanger. For Keel Cooling system or when using a water boiler, the coolant capacity must be adapted according to the pipes length and the tank capacity.

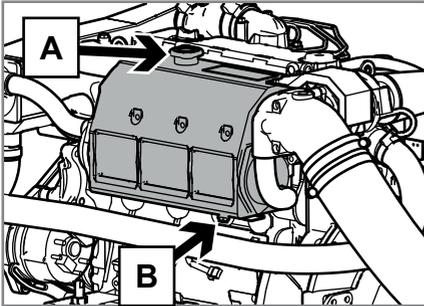

To fill the coolant system:

1. Turn the coolant filler cap **A** slowly to the first stop and let any pressure escape from the system then remove the cap.
2. Check that the drain plug **B** is properly tightened.
3. Add coolant through the heat exchanger filler port to the correct level.

⚠ CAUTION

* If a boiler is connected to the engine, follow the filling procedure given by the manufacturer of the boiler. If the boiler is above the engine in the boat, first fill the heat exchanger, the boiler, and top up with coolant the recovery tank located above the boiler.

* Make sure not to overfill the heat exchanger when filling with coolant. If too much coolant has been added, drain part of the coolant.

4. Check the coolant level in the recovery tank (if fitted). Top up if necessary.

5. Start the engine and let it operate few minutes at idle. Stop the engine, wait few minutes and check the coolant level in the heat exchanger and in the recovery tank (if equipped). Top up if necessary.



Raw water system

⚠ DANGER

When the boat is in the water, water can flow into the boat via components located below the waterline. Close the raw water cock (if fitted) or prevent water discharge before working on this raw water system.

The raw water system allows to cool the engine coolant and the exhaust gas.

Raw water is drawn into the heat exchanger by the raw water pump of the engine. The raw water is discharged via the exhaust elbow, where it is mixed with exhaust gases.

NOTICE: If there's any risk of frost, raw water system should be drained.

Siphon breaker

⚠ DANGER

Close the sea cock before any operation on the siphon breaker.

NOTICE: The use of a siphon breaker is mandatory if the exhaust elbow is under the waterline at full load or at less than 200 mm above it. A siphon breaker is mandatory in all Sail Boat and when there's a risk of water entry in the engine.

The siphon breaker prevents raw water entry into the cylinders via the raw water/exhaust system.

To operate correctly, the siphon breaker should clean twice a season, or when leakage appears.

⚠ CAUTION

A faulty operation of the siphon breaker will lead to water entry in the engine.

Inspect it regularly and clean it following the instructions given by the manufacturer.

Raw water pump impeller


CAUTION

If the engine has been run without supply of raw water, check the raw water pump impeller. Change it if needed.

The raw water pump impeller is an essential component of the engine. It should be changed regularly along with the seal. A worn impeller could crack and damage the cooling system. Always have a spare raw water pump impeller on board.

NOTICE: The service life of the raw water pump impeller vary depending the operating conditions.

To extract the impeller:

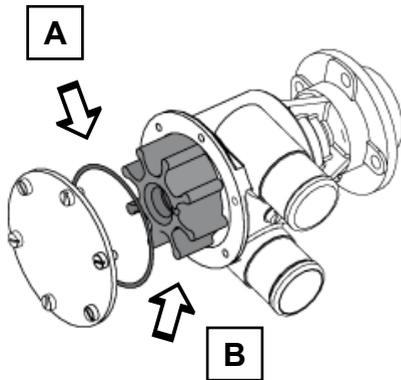

1. Stop the engine, remove the key from the panel and close the sea cock.

2. Remove the top cover flange of the raw water pump (6 screws).

3. Remove the gasket **A**.

4. With a permanent pen, mark the position of the neoprene impeller **B** inside the pump in order to install it in the correct position in case of re-installation.

5. gently pull off the impeller in using an extractor.

6. Closely inspect the impeller. Check for damaged, cracked, broken missing or flattened vanes. Change the impeller if it is damaged. Thoroughly clean and drain the raw water system if parts of the impeller are missing.

7. Inspect the cover and the gasket for corrosion or damage. Change it if they are damaged.

8. Lubricate the inside of the pump and the cover with waterproof grease for rubber.

9. Install the impeller. If reinstalling the old one, place it at the same location using the mark done previously. Rotate the impeller in the same direction as the engine rotation. Lubricate the impeller with waterproof grease for rubber.

10. Install the gasket and the cover on the pump housing.

11. Open the sea cock, check for leaks. Prime the raw water system by adding water through the raw water filter if necessary.

12. Start the engine and check for leaks.

Cleaning the raw water filter

A raw water filter must be fitted between the raw water intake and the raw water pump of the engine.

The model of prefilter can vary according to the boat as the raw water filter is an optional extra not in the scope of supply of the engine. These instructions are given as an example only.

Check the raw water filter more regularly than indicated in the service schedule if the boat is used in water with a lot of dirt and/or mud.

To clean the filter:

1. Stop the engine, remove the key from the panel and close the sea cock.
2. Check the condition of the raw water filter. If deposits have formed, screw off cover and remove seal plate.
3. Remove all the contaminants. Rinse the filter and the housing with fresh water and check the condition of the seal.
4. Reinstall all the components and open the sea cock. Start the engine and check for leaks.

NOTICE: When the boat is out of water, check that the through-hull is not obstructed by mud or algae.

Raw water system - Draining

WARNING


It is highly recommended to carry out these operations when the boat is laid up on land. If the boat cannot be removed from the water, close the sea cock and prevent water entry by any means.

1. Stop the engine, remove the key from the panel and close the sea cock.
2. Remove the cover of the raw water pump.
3. Remove the cover and the seal from the raw water filter.
4. If a siphon breaker is fitted, drain it following the manufacturer recommendations.
5. Drain the cooling system of the transmission lubrication circuit (if fitted).
6. Drain the waterlock and any other equipment connected to the raw water and exhaust system.
7. Reinstall correctly all components. Open the sea cock and check for leaks. Prime the raw water system by adding water through the raw water filter if necessary.

Raw water system - Cleaning and inhibiting

The raw water system must be flushed with fresh water to prevent the building up of deposits and salt crystals in the circuit. It must also be protected against corrosion and frost when performing long-term storage.

1. Stop the engine and close the sea cock.
2. Disconnect the hose on the outlet side of the raw water filter.
3. Place the free hose in a container filled with fresh water. Ensure that the tank is large enough as the raw water pump must never run without water.

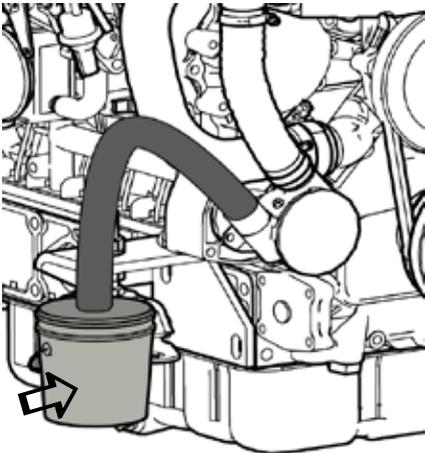

4. Check that no one is in the vicinity of the engine, the propeller and the exhaust outlet. Put the lever in neutral and start the engine.

5. Let the engine run a few minutes at idle. Add fresh water in the container if necessary.

6. Stop the engine.

7. Fill the container with engine coolant mix (50% clean water, 50% anti-freeze).

8. Start the engine and let it run at idle. Add enough coolant to fill the raw water system with coolant.

9. Stop the engine before the container is empty.

10. Reconnect the hose.

11. Drain the coolant before the next time is used.

⚠ WARNING

Check for leaks before the next engine start.

⚠ CAUTION

When preparing the engine for long term storage, if the engine is likely to be subject to frost, drain all water in the raw filter circuit.

Electrical system

DANGER

Stop the engine and switch off the main switches to break the current before working on the electrical system. Isolate shore current to any accessories mounted on the engine.

CAUTION

The main switch should always be switched ON when the engine is operating. Never disconnect the lead between the alternator and the battery when the engine is operating.

Wires and connectors

Check that electrical wires and connectors are dry and in good conditions.

The engine extension harness should be away from any water projection and must be correctly attached as high as possible in the hold. Change it if any defect appears.

Tighten the cable terminals and lubricate them with appropriate grease.

Fuses

The engine electrical system is protected from electrical overload damage by fuses.

If the electrical system does not work, the engine does not start or the instruments panel don't operate, a fuse may have trip.

Investigate the cause before resetting the fuse. Always have spare fuses on board. Replace a blown fuse with one of the same rating.

CAUTION

If the replacement fuse blows, this indicates an electrical problem. Don't start the engine, except in case of emergency, and contact a Nanni workshop.

Boats with metallic hulls

Engines in metallic hulls are generally fitted with a two-pole electrical system. This system allows to electrically isolate the engine from the electrical ground of the boat.

Contact your Nanni dealer for more informations.

Battery

DANGER

* Never touch the battery electrolyte. The diluted sulphuric acid solution burns skin and make holes in clothing. Should this occur, immediately wash it off with plenty of clean water and obtain medical assistance without delay.

* Disconnect the battery leads before carrying out any soldering work on metallic hull.

Always read the manufacturer recommendations before operating the battery.

Battery should be kept clean and dry. Oxidation or the deposit of impurities on the battery and on its terminals may lead to short circuits, voltage drops and premature discharging, notably in wet weather. Use a brass brush to clean battery terminals.

When **DISCONNECTING** the starter cables, always disconnect **FIRST** the **NEGATIVE LEAD (-)**, and then the **POSITIVE (+)**.

Always **CONNECT FIRST** the **POSITIVE LEAD (+)** to the **POSITIVE TERMINAL (+)** of the battery, and then the **NEGATIVE (-)**.

Use distilled water to top up the electrolyte level. Follow in priority the battery manufacturer instructions for topping up. If the battery

electrolyte level is not adjustable (maintenance free battery type), do not use or charge the battery if the fluid level stands below the lower limit level.

When adding electrolyte, unscrew the vent plugs but leave them in their holes.

DANGER

Check that the battery compartment is well drained and ventilated. When charging, battery produces hydrogen which is extremely explosive.

If the battery is replaced, use a battery with similar specifications to the previous one.

To simultaneously charge two independent battery with a single alternator, an isolator is available as an option on most engines. Contact an authorized Nanni dealer.

When storing the engine, adjust the battery electrolyte level and store it in a dry place. Recharge the battery as often as possible to extend its service life.



Alternator belt

DANGER

Stop the engine and remove the key before servicing the alternator belt.

NOTICE: Always keep a replacement belt on-board.

The alternator belt drives both the coolant pump and the alternator. Additional belt can also be fitted.


A loosen or damaged belt can result in overheats or insufficient alternator charging. A belt that is too tight can damage the bearings in the pump and the alternator.

Visually check the belt for excessive wear, frayed cords, etc. If any defect has been found, change the belt. Check that it fits properly in the pulley.

Belt is constantly tensioned by an automatic belt tensioner.

Alternator location: remove the top engine cover. The alternator is fitted atop the engine, between the two camshafts and on the water heat exchange side .

To change the belt:

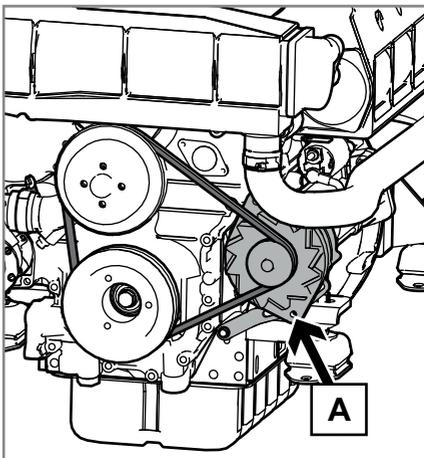

1. Stop the engine and remove the key from the panel.
2. Move the tensioner mechanism using a wrench and slip out the belt from alternator pulley. Remove it completely.
3. Install the new belt. Check that the belt seats nicely between the edges of all the pulleys.
4. Check the tension after few hours of operation.



Camshaft timing

From camshaft down to crankshaft, timing is ordered through a gear system and is service free.

Long term storage

A set of operations must be performed to prepare and protect the engine for a long-term storage.

Refer to the corresponding chapter in the **MAINTENANCE** section to perform some of these operations. We recommend that you have all these operations carried out by a Nanni authorized workshop.

NOTICE: It might be necessary to adapt these operations depending the climatic conditions. Contact a Nanni authorized workshop for further informations.

For prolonged storage (>12 months), a specific set of measures must be performed. All these operations should be carried out by a Nanni authorized workshop.

CAUTION

* If the engine is likely to be subject to frost, drain all water in the seawater circuit.

Long term storage procedure

Complete the nearest periodic maintenance inspections and operations before performing the long term storage procedure.

1. Drain and change the engine and transmission oil.
2. Change the engine oil filter.
3. Change the fuel filter and prefilter.
4. Run the engine to normal operating temperature.
5. Stop the engine and take the boat out of water.
6. Drain and clean all components of the seawater system. Protect the components against corrosion.
7. Remove the impeller from the seawater pump (if fitted). Store it in a cool and dry place. Indicate by any means that the impeller has been removed.
8. Check the engine coolant level and condition. Top up if necessary.

9. Drain any water and contaminants from the fuel tank.

10. Fill totally the fuel tank.

11. Remove the air filter. Secure all air intake with clean clothes.

12. Clean the engine. Repair any damaged areas of paintwork with Nanni original paint.

⚠ CAUTION

Do not point a high pressure water jet toward seals, hoses, grommets, etc.

13. Clean the hull, the hold and the drive (if fitted).

14. Check all control cables. Use grease and rust inhibitor to protect the cables.

15. Disconnect battery leads. Adjust electrolyte level if necessary. Charge the battery. Store the battery in a dry place.

16. Release tension. on belts.

17. Spray the engine with water-repellent product.

18. Remove the propeller for storage. Check the overall condition of all components of the propulsion system.

Restarting the engine

1. Perform external cleaning of the engine and control its condition.

2. Drain and change the engine and transmission oil.

3. Change oil filters.

4. Drain the coolant from the seawater system.

5. Check the condition of the raw water pump impeller. Change it if needed. Install the impeller.

6. Remove cloth and tape from openings. Install the air filter.

7. Close/Tighten all plugs and drain cocks.

8. Check the condition of hoses and clamps.

9. Check the engine coolant level and its condition. Top up if necessary.

10. Connect fully charged batteries.

11. Check the anodes.

12. Install the propeller.

13. Check the operation of the control cables and their condition.

14. Check belts. Adjust the tension.

15. Bleed the fuel system.

Once the boat is in the water:

16. Open the sea cock and prime the seawater system (if fitted).

17. Start the engine. Check for leaks and correct operation.



8 TROUBLESHOOTING

If the engine does not function properly, use the following chart to identify the cause. If the cause of trouble can not be found, contact a Nanni authorized workshop.

NOTICE: Some components may not be part of the engine ordered. This list is not exhaustive and is only an assistance in case of emergencies.

	PROBABLE CAUSES
The engine fails to start	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 13
The engine starts but suddenly stops	1, 2, 3, 4, 5
The engine is difficult to start	1, 2, 3, 4, 5, 6, 8, 9
The starter motor is not turning or turn slowly	8, 9
The starter motor turns but the engine does not start	1, 2, 3, 4, 5, 6, 7
The engine does not reach its rated speed at wide open throttle	2, 3, 4, 5, 6, 7, 12, 14, 15, 16, 17, 26, 28
The engine operate unevenly	1, 2, 3, 4, 5, 6, 7, 14, 15, 16, 17, 18, 19, 20, 24, 28
The engine vibrates a lot	16, 27
Black exhaust smoke	4, 5, 14, 15, 16, 19, 20, 28
White exhaust smoke	4, 5, 23, 25
High fuel consumption	4, 7, 14, 15, 16, 19, 20, 22, 28
The engine overheats / coolant temperature too high	14, 15, 16, 18, 19, 20, 21, 22, 28
The control lever is hard to operate	12, 14, 15, 16, 17, 26
No shift between ahead and astern	9, 11, 12, 16, 17, 26
Battery charge warning lamp comes on	8, 9, 11, 18

The numbers refer to the possible causes indicated on the following page. * Contact a Nanni authorized workshop.

- 1.** Lack of fuel
- 2.** Air in fuel system
- 3.** Fuel filter fouled or clogged
- 4.** Fuel do not meet specified standard
- 5.** Water/contaminants in fuel
- 6.** Valve clearance is wrong *
- 7.** Low compression *
- 8.** Insufficient battery charge / Defective battery
- 9.** Faulty electrical cables contact
- 10.** Faulty starter or starter switch *
- 11.** Tripped fuse / Main switch is open
- 12.** Transmission is damaged*
- 13.** Control lever not in neutral / Stop control pulled out
- 14.** Too much load on board
- 15.** Fouling on underwater hull, drive or propeller
- 16.** Defective/incorrect propeller *
- 17.** Faulty operation of control lever / control cables
- 18.** Loosen or damaged belt
- 19.** Incorrect coolant / Low coolant level / Coolant leaks
- 20.** Cooling system does not operate correctly *
- 21.** Faulty thermostat *
- 22.** Sea cock valve closed / Raw water filter clogged
- 23.** Lube oil burns. Excessive oil consumption *
- 24.** Engine oil level too low
- 25.** Engine oil level too high
- 26.** Transmission oil level too low
- 27.** Defective engine mounting *
- 28.** Insufficient air supply *



9

TECHNICAL DATA

MODEL	N4.65
ENGINE CHARACTERISTICS	
Type	4 stroke Diesel
Max. power - kW (hp)*	43.4 - 59
Number of cylinders / Arrangement	4 in line
Displacement (cm ³)	2434
Bore and stroke (mm)	87 - 102.4
Air intake	Turbocharged
Compression ratio	23:1
Idle speed - clutch disengaged (rpm)*	850
Rated engine speed @ Max power (rpm)*	2700
Weight without gearbox (kg)	234
Direction of rotation, view from flywheel	Counter clockwise

MODEL	N4.65
ELECTRICAL SYSTEM	
Recommended starter battery capacity (Ah)	100 ~ 150
Starter (kW)	2
Standard Alternator (V-A)	12 - 120
FUEL SYSTEM	
Injection system	Indirect (E-TVCS)
Specific fuel consumption (g/kWh) at wide open throttle	258
Fuel requirements	EN 590 / ASTM D975 No.2-D Never use fuels that have sulfur content greater than 1.0 %
LUBRICATION SYSTEM	
Oil quality	API CF mini
Oil viscosity (temperate climate)	SAE 15W40
Engine oil capacity - no engine inclination (litre)	9.5
Min oil pressure at rated rpm (bar)	3.5
COOLING SYSTEM	
Coolant capacity - no engine inclination (litres)	9
Coolant pump flow rate at rated rpm (l/min)	88
Raw water pump flow rate at rated rpm (l/min)	130

Emissions compliance

In order to respect the emission law conformity, it is important to follow carefully the installation instructions provided by Nanni Industries.



NANNI INDUSTRIES S.A.S FRANCE

11, Avenue Mariotte-Zone Industrielle

33260 La Teste - France

Tel: + 33 (0)5 56 22 30 60

Fax: +33 (0)5 56 22 30 79

Email: contact@nannidiesel.com

www.nannidiesel.com

P/N 970316763
062017.indA